

Guardian Ice

Ice Machine Treatment for Hospitals and Healthcare

Commercial ice machines are prone to microbial contamination, and if not thoroughly cleaned and sanitized regularly, can cause the spread of harmful germs. Microbial growth in ice machines is a common problem resulting in biofilm or slime buildup. Pathogens potentially found in contaminated ice include listeria, salmonella, E.coli, and B. ccccerus. The Guardian Ice is your ideal solution to keep ice machine heads and bins clean, reducing the risk of microbial contamination.

- Fully automatic
- Easy to use and install
- No costly and complicated chemicals
- Leaves no residue / operates unattended
- Low power consumption
- Very low maintenance
- Two years operation on PHI Cell® life
- No tools required for PHI Cell® replacement

Proprietary PHI Cell® creates gaseous airborne oxidizers that are continually delivered to the ice machine head and bin, effectively destroying bacteria and odor.

Easy installation and adaptable to any ice machine. The Guardian Ice is wall mounted alongside the ice machine and connected using the provided installation

Automated operation requires no chemical addition and very little maintenance. The PHI Cell® is replaced every two years.



H₂O₂



UV Light




CFM



Guardian Ice

RGF's Proprietary Photohydroionization (PHI Cell®)


High intensity UV light is targeted on a hydrated quad-metallic target creating safe, low-level hydroperoxides, super oxide ions, hydroxyl radicals, and hydroxides. PHI oxidizers are highly effective, friendly, gaseous oxidizers. Oxygen and hydrogen are created after organics, bacteria, odor or gases are oxidized.

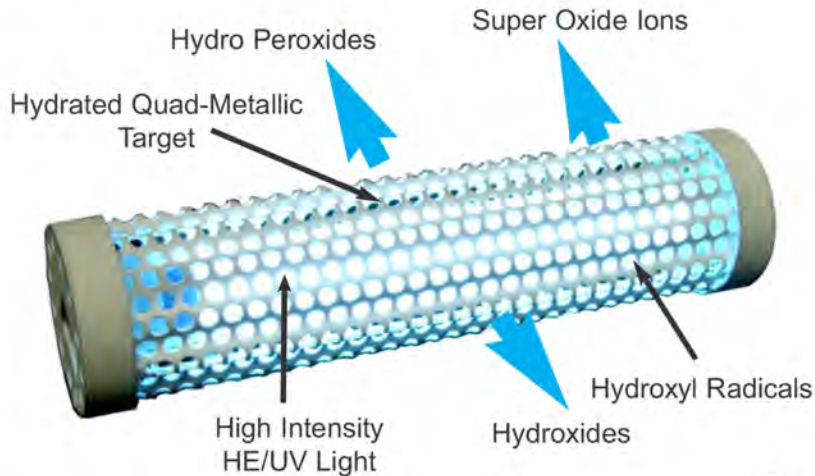

Installation kit includes

- 25' of additional hose
- Five (5) 3/4" grommets
- One (1) wall hose bracket
- Two (2) hose clamps

Bacteria reduction

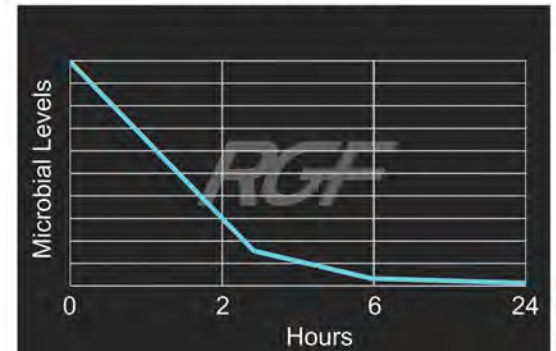

SPECIFICATIONS

Item#
IMSB

Voltage
110V 60 HZ 1 AMPS 14 WATTS

Weight
10 LBS.

Material
Stainless Steel

Dimensions
18"H x 4"W x 4"D

Finish
Brushed Stainless Steel

Controls
Indicator Light / ON OFF Switch

Fan Volume
45 C.F.M.

Replacement Cell
PHIC-9A

Safety Net



Solutions that save lives.

info@safetynetamerica.com

866-918-8546